

Parts Department Dairy Equipment & Supply
800-245-8222

Assembling Your New 3/4HP Milker


Unpacking your unit you should have the following parts:



Rotate the pump so that the metal box is facing towards you (as seen in the picture above).

Installing the Manifold:


- Screw the manifold into the inlet of the pump until it is hand tight. Please note the inlet is the port that is closest to you when the pump is positioned as seen below:

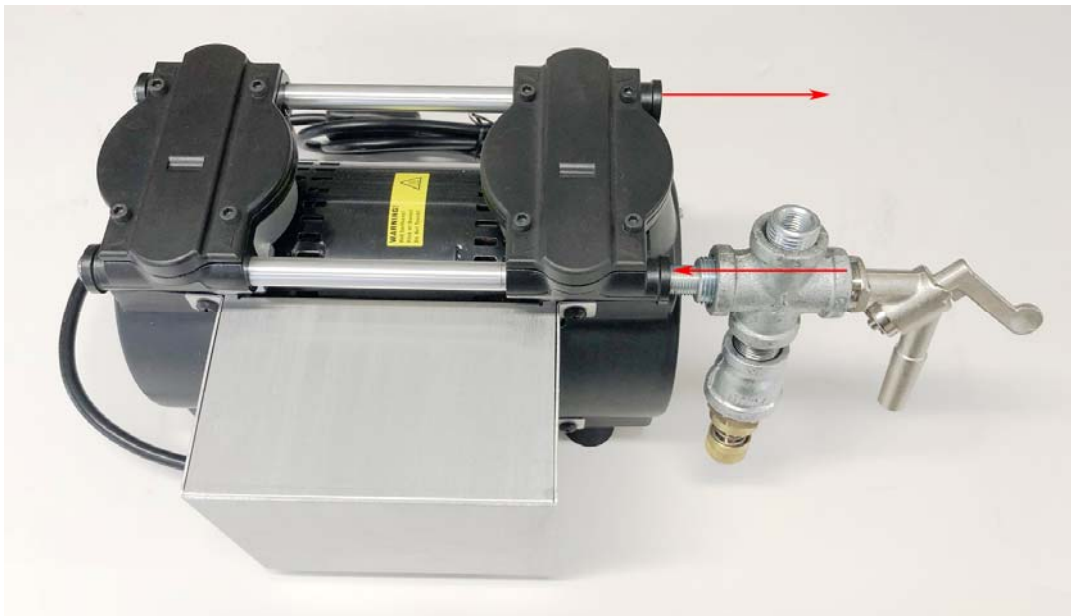

Parts Department Dairy Equipment & Supply
800-245-8222

Installing Vacuum Gauge:

- Screw the vacuum gauge into the top of the manifold until hand tight.

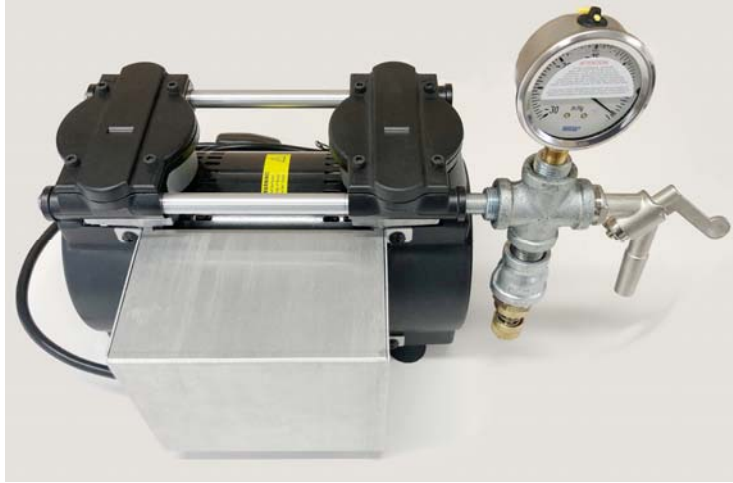

- Once tightened down, flip the yellow lever on the top of the gauge from the close position to the open position.



Finally, screw the muffler onto the outlet of the pump until hand tight.



Thank you for your purchase from Parts Dept, if you have any questions regarding assembly or operating your pump please reach out to our technical department at 800-245-8222 or by emailing us at sales@partsdeptonline.com.